



Trex Decking Installation Parts

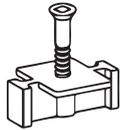


Start
Clip




Universal
Fastener

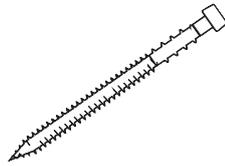

Cap-Tor
Screw

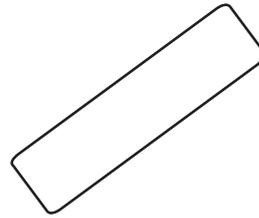



Square Edge
Decking Board

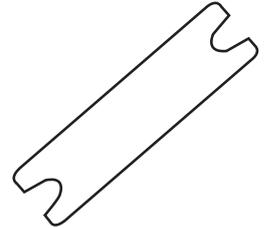

Grooved Edge
Decking Board

NOTE: Maximum spacing of deck boards using Hideaway system is 450mm on centre. Fasteners provide 6mm gap when installed correctly.



Installing Start Clips and First Board

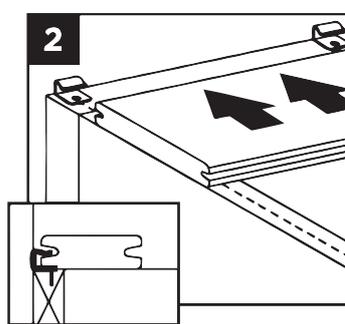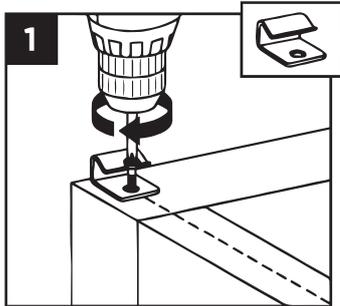

1. Install start clips on edge of ledger board, centred on each joist. Secure clips with screws.
2. Push grooved edge of deck board into start clips.

IMPORTANT: First board **MUST** be straight and well secured.

Installing Screws and Universal Fasteners

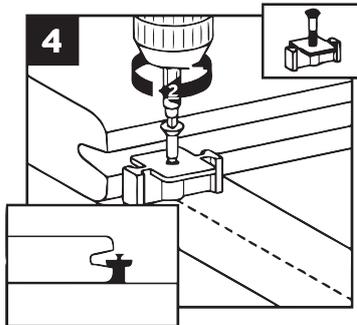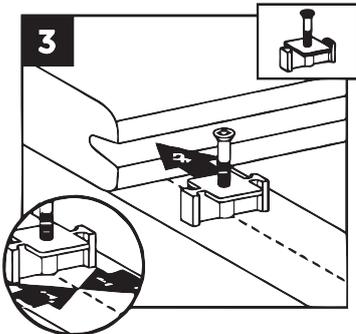


3. Insert fastener into grooved edge of deck board.
4. Align screw hole in fastener with centre of joist. Continue along the length of the board at every joist.

NOTE: Screw only half way down. **DO NOT** fully tighten universal fastener screws


Installing Second Board

5. Slide second board into place, making sure fasteners fit into the groove. Install screws & universal fasteners on the other side of the second board in the same manner as steps 3, 4 & 5. **DO NOT** fully tighten the screw of the universal fastener.

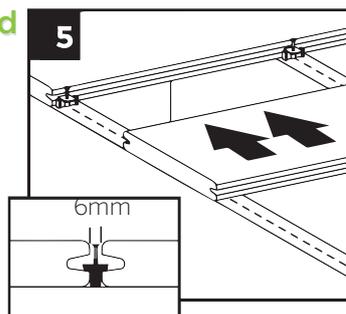

Complete Universal Fasteners Installation


6. Tighten screws on the fasteners in the first row. Proceeded with steps 3 through 5, tightening down each row after board that follows in its place. Be sure to use a long #1 square bit.

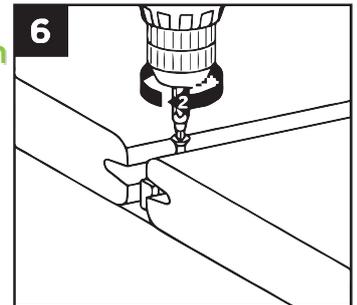

Installing the Last Board


Option 1: Fascia Flush with Deck Surface

- 7a. Install 65mm Cap-Tor screws through the face of the last board. Attach a square edge board as a fascia flush with the deck surface with minimum two 65mm Cap-Tor screws maximum spacing of 450mm on center.

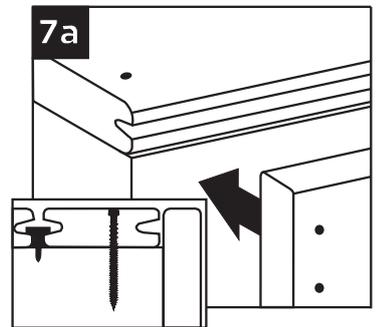

Option 2: Mitred Border with Overhang

- 7b. Install 65mm Cap-Tor screws through the face of the last board using a square edge board as a mitred border (picture frame) overhanging the last joist. Attach a square edge board as a fascia below overhanging deck board with minimum two 65mm Cap-Tor screws maximum spacing of 450mm on center.

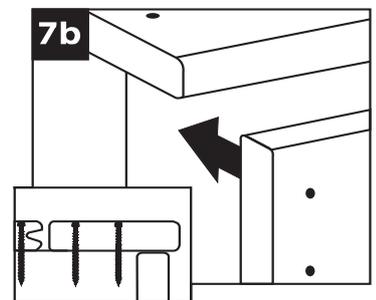

Trex[®]

The World's #1 Decking Brand